



COOPER TIMBER COT

41339








MADE IN CHINA MADE FROM NEW ZEALAND PINE

ASSEMBLY INSTRUCTIONS





Cooper Timber Cot

RODUCT CODE: 41339

HARDWARE LIST

						
S1 x 4	S2 x 8	S3 x 4	N1 x 4	S4 x 8	D1 x 8	K1 x 2

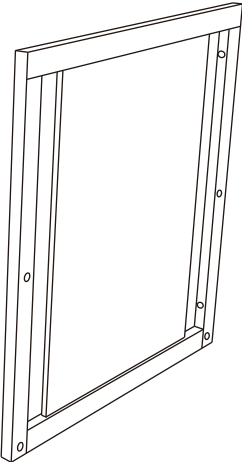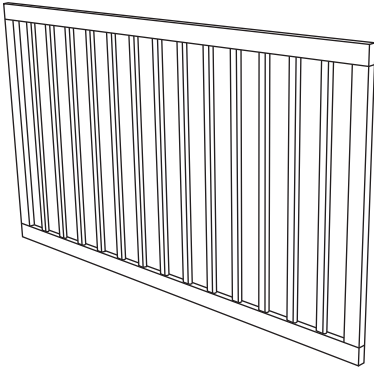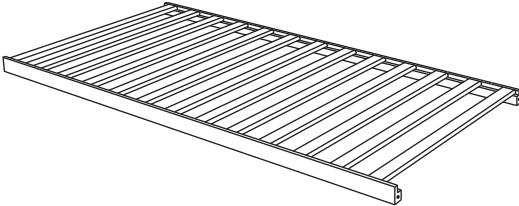COMPONENT LIST


			
A X 2	B X 4	C X 2	D X 1

ASSEMBLY INSTRUCTIONS


Cooper Timber Cot

PRODUCT CODE: 41339

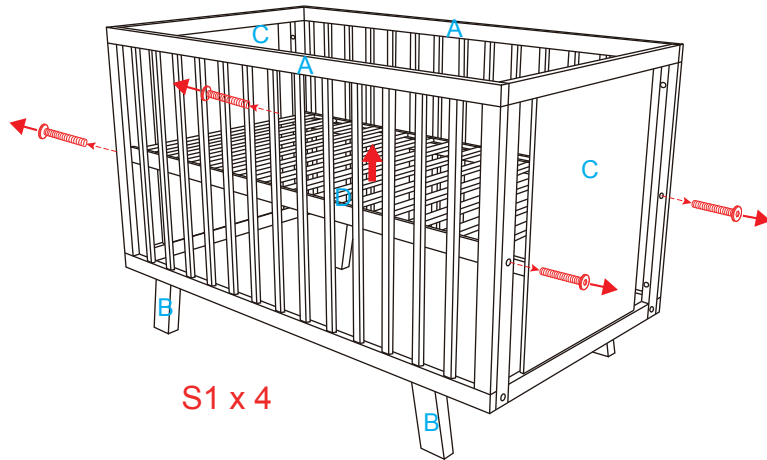
STEP 1



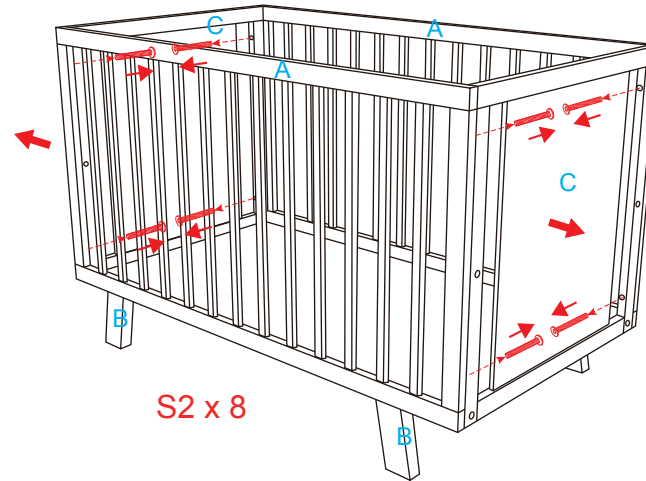
STEP 2



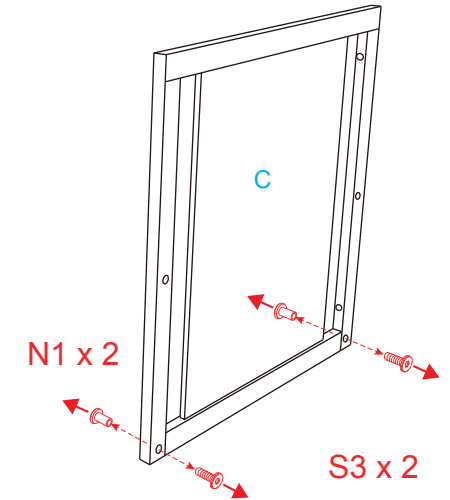STEP 3



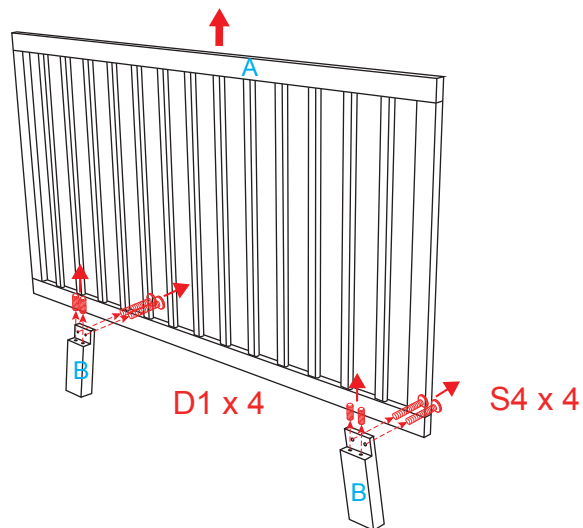STEP 4




Ensure all screws and hardware are tightened and locked into place before use.
Use only on a firm ground which is horizontal, level and dry.

ASSEMBLY INSTRUCTIONS


Cooper Timber Cot

PRODUCT CODE: 41339

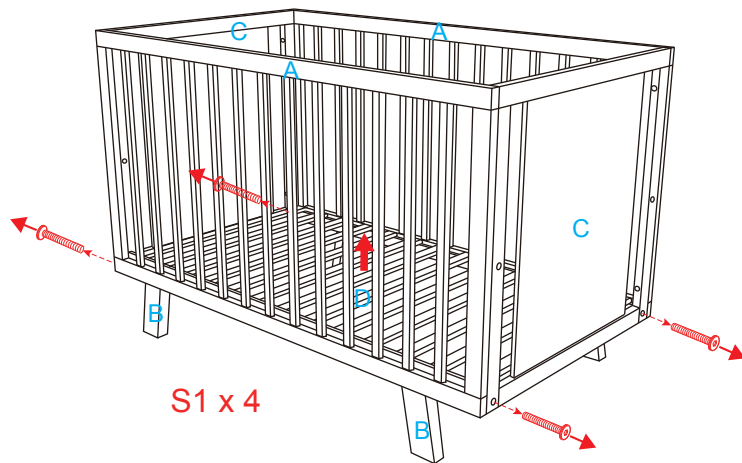
STEP 1



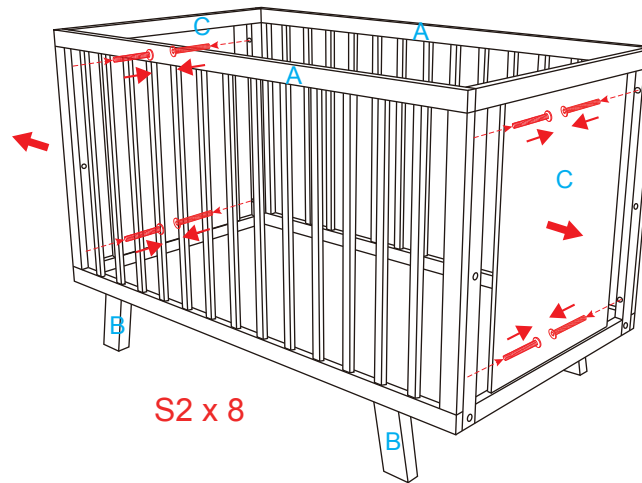
STEP 2



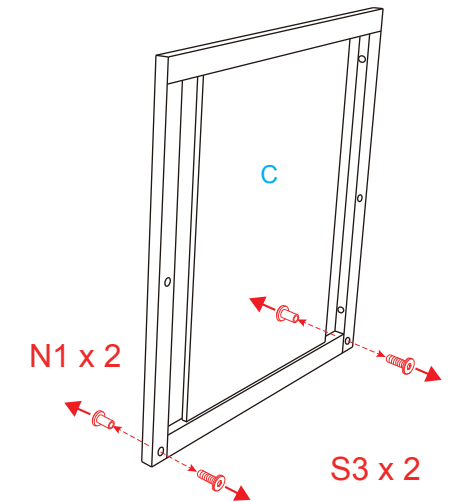STEP 3



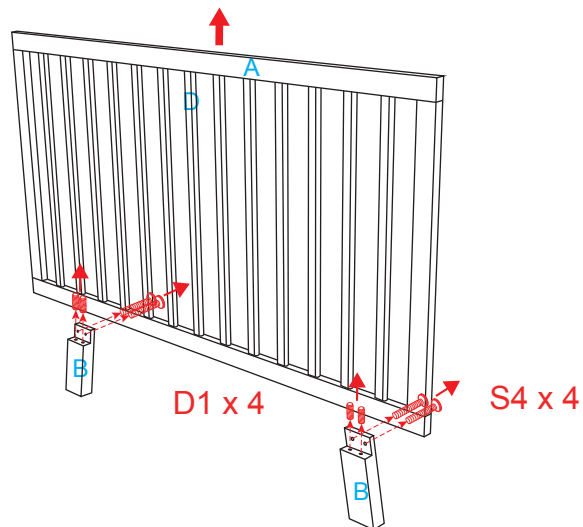STEP 4



Ensure all screws and hardware are tightened and locked into place before use.
Use only on a firm ground which is horizontal, level and dry.